


INSTALLATION

Apply coolant to the new seal rubber and install it to the thermostat flange.

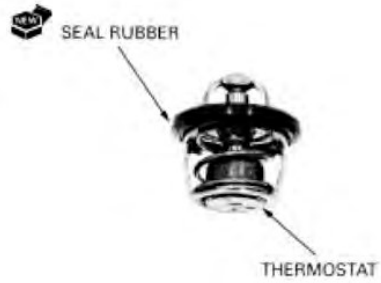

Install the thermostat into the housing with its hole facing up.



Install the thermostat housing cover and two bolts. Tighten the bolts securely.

Fill and bleed the cooling system (page 6-5).

