

TOOLS

Clutch center holder
Lock nut wrench, 20 x 24 mm

07GMB – KT70101
07716 – 0020100

TROUBLESHOOTING

Faulty clutch operation can usually be corrected by adjusting the clutch system.

Clutch slips when accelerating

- Incorrect clutch adjustment
- Worn clutch disc
- Weak clutch springs

Motorcycle creeps with clutch disengaged

- Incorrect clutch adjustment
- Clutch plate warped
- Faulty clutch lifter

Hard to shift

- Damaged gearshift spindle
- Damaged stopper plate and pin
- Loose stopper plate bolt
- Incorrect clutch adjustment

Transmission jumps out of gear

- Damaged stopper arm
- Damaged stopper plate
- Loose stopper plate bolt

Gearshift pedal will not return

- Weak or broken gearshift spindle return spring
- Bent gearshift spindle