

BRAKE SYSTEM

Measure the brake disc warpage with a dial indicator.

SERVICE LIMIT: 0.1 mm (0.004 in)

Check the wheel bearings for excessive play, if the warpage exceeds the service limit.

Replace the brake disc if the wheel bearings are normal.



FRONT MASTER CYLINDER

REMOVAL


CAUTION:

Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

Drain the brake fluid from the front brake hydraulic system (page 16-3).

Remove the front brake light switch connectors.
Remove the bolt, sealing washers and disconnect the brake hose.

Remove the master cylinder holder bolts, holder and master cylinder.

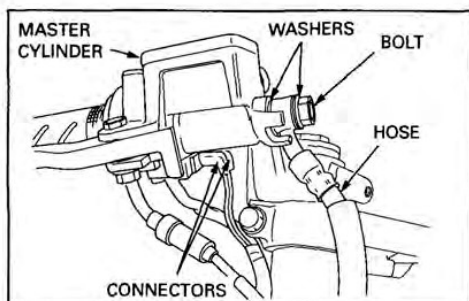

DISASSEMBLY

Remove the pivot nut, bolt and brake lever.
Remove the screw and front brake light switch.

