

INDEX

SPARK PLUG	3-6
SPECIFICATIONS	1-4
STARTER CLUTCH	9-4
STARTER MOTOR	19-4
STARTER RELAY SWITCH	19-10
STEERING HEAD BEARINGS	3-22
STEERING STEM	14-19
SUB-AIR CLEANER	5-4
SUSPENSION	3-20
SWINGARM	15-10
SYSTEM DIAGRAM	
(CHARGING SYSTEM)	17-0
(IGNITION SYSTEM)	18-0
(ELECTRIC STARTER)	19-0
SYSTEM LOCATION	20-0
SYSTEM TESTING	6-3
THERMOSTAT	6-6
THROTTLE OPERATION	3-4
TOOLS	1-14
TORQUE VALUES	1-12
TRANSMISSION ASSEMBLY	12-10
TRANSMISSION DISASSEMBLY	12-3
TROUBLESHOOTING	
(ALTERNATOR/STARTER CLUTCH)	9-1
(COOLING SYSTEM)	6-2
(CHARGING SYSTEM)	17-3
(BRAKE SYSTEM)	16-2
(CLUTCH/GEARSHIFT LINKAGE)	8-2
(CRANKSHAFT/BALANCER)	13-1
(CYLINDER HEAD/VALVES)	10-2
(CYLINDER/PISTON)	11-2
(ELECTRIC STARTER)	19-2
(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1
(FRONT WHEEL/SUSPENSION/STEERING)	14-2
(FUEL SYSTEM)	5-2
(IGNITION SYSTEM)	18-2
(LIGHTS/METERS/SWITCHES)	20-2
(LUBRICATION SYSTEM)	4-1
(REAR WHEEL/SUSPENSION)	15-2
(TRANSMISSION)	12-2
TURN SIGNAL RELAY	20-13
UNDER COWL	2-3
UPPER COWL	2-5
VALVE CLEARANCE	3-8
VALVE GUIDE REPLACEMENT	10-13
VALVE SEAT INSPECTION	10-14
VALVE SEAT REFACING	10-15
WATER PUMP	6-12
WHEELS/TIRES	3-21