

(Ref.No.) Description	Function
(3) Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p>NOTICE</p> <p>Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.</p>
(4) Neutral indicator (green)	Lights when the transmission is in neutral.
(5) Right turn signal indicator (green)	Flashes when the right turn signal operates.
(6) High beam indicator (blue)	Lights when the headlight is on high beam.
(7) RESET button	This button is used to reset the tripmeter (page 19) or to set the digital clock (page 24).