


Coolant Temperature Gauge

The coolant temperature gauge (1) shows coolant temperature.

The normal operating temperature range is within the section between the segment C (2) and segment H (3).

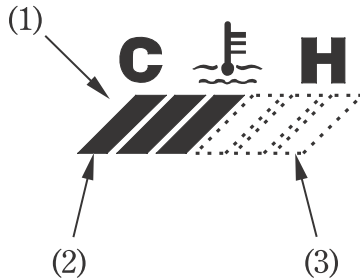

- (1) Coolant temperature gauge
- (2) Segment C
- (3) Segment H

Overheating Message:

When the coolant is over specified temperature, the segment H flashes. If this occurs, stop the engine and check the reserve tank coolant level. Read pages 31 – 32 and do not ride the motorcycle until the problem has been corrected.

NOTICE

Exceeding maximum running temperature may cause serious engine damage.

