


RIGHT UNDER COWL

The right under cowl must be removed to service the oil filter.

Removal:

1. Remove the bolt A (1) and bolts B (2).
2. Remove the hooks (3) from the slots (4).
3. Remove the middle cowl (5) and disconnect the front turn signal connectors (6).
 - Be careful not to apply weight to the middle cowl.
 - Carefully release the hooks.

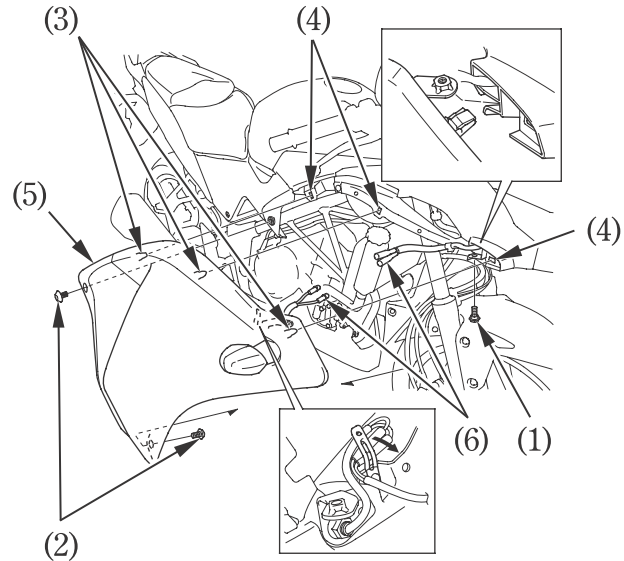

- | | |
|-------------|----------------------------------|
| (1) Bolt A | (4) Slots |
| (2) Bolts B | (5) Middle cowl |
| (3) Hooks | (6) Front turn signal connectors |