


Headlight Bulb

1. Pull off the connector (1) without turning.
2. Remove the dust cover (2).
3. Press the pin (3) down and pull out the bulb (4) without turning it.
4. Install a new bulb in the reverse order of removal.

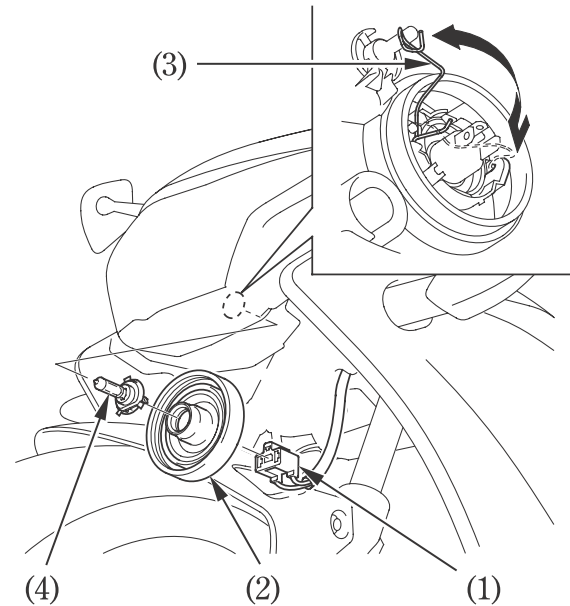

(1) Connector
(2) Dust cover

(3) Pin
(4) Bulb