


## Instruments (Continued)

### 2 Backlight brightness adjustment:

You can adjust the brightness to five levels.

① Press SEL button. The brightness is switched.

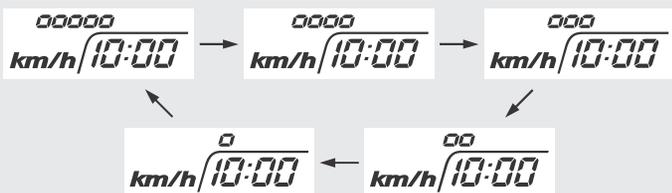

② Press SET button. The backlight is set, and then the display moves to activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode.