



⇒ **Right turn signal indicator**

☰ **High beam indicator**

**N Neutral indicator**  
Comes on when the transmission is in Neutral.

**HISS indicator** ➔ **P. 82**

- Comes on briefly when the ignition switch is turned on. Goes off if the ignition key has the correct coding.
- Flashes every 2 seconds for 24 hours when the ignition switch is turned off.