


Other Adjustments ▶ Adjusting the Headlight Aim

## Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. Turn the pinion using a Phillips screwdriver provided in the tool kit (▶ P. 55) in or out as necessary. Obey local laws and regulations.

Maintenance

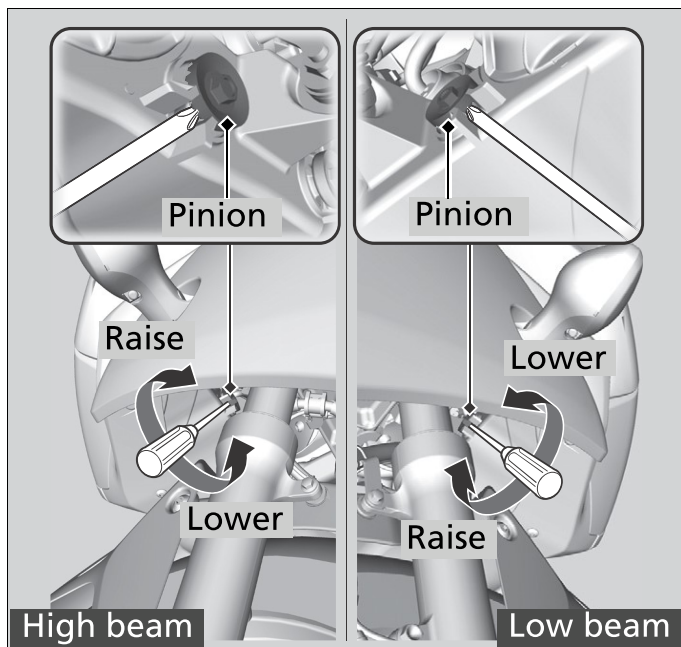

## Adjusting the Brakelight Switch

Check the operation of the brakelight switch. Turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

