


## INNER COWL

### Removal:

1. Remove the front cowl (page 59 ).
2. Remove the clips (1).

### Installation:

- Installation can be done in the reverse order of removal.

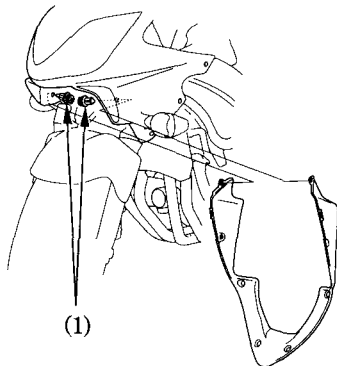

(1) Clips