

## SIDE COVER

To remove the right and left side covers (1), insert the ignition key or coin into the quick-release fastener (2), turn it 90° counterclockwise so that the groove in the fastener is horizontal, pull out the prongs (3) and (4) and ribs (5) in the order listed and then gently pull the side cover.


### NOTE:

\* Be careful, not to break the prongs (4).


### NOTE:

\* Use groove (A) when the ignition key is used; use groove (B) when a coin is used.

FASTENER (2) LOCKED

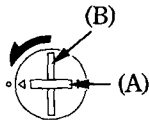

FASTENER (2) UNLOCKED

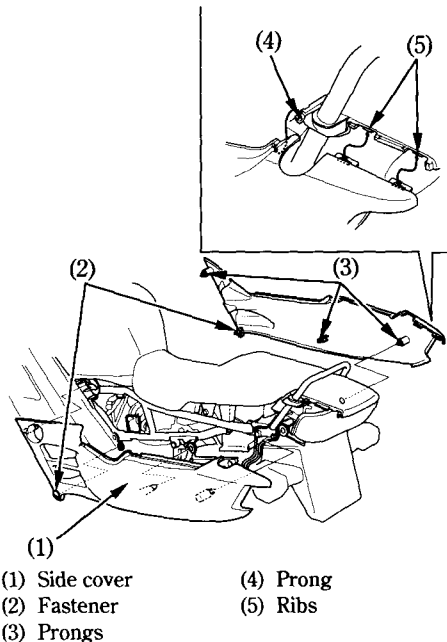

(1) Side cover

(2) Fastener

(3) Prongs

(4) Prong

(5) Ribs