

(Ref. No.) Description	Function
(1) Speedometer	Shows riding speed.
(2) Left turn signal indicator (green)	Flashes when the left turn signal operates.
(3) High beam indicator (blue)	Lights when the headlight is on high beam.
(4) Tachometer	Shows engine rpm.
(5) Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p>CAUTION:</p> <p>* Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.</p>
(6) Low oil pressure indicator (red)	<p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>CAUTION:</p> <p>* Running the engine with insufficient oil pressure may cause serious engine damage.</p>
(7) Right turn signal indicator (green)	Flashes when the right turn signal operates.