


### **Position Light Bulb (Except U, MX, BR type)**

1. Pull the position light socket (1) and remove it.
2. Pull out the bulb (2) without turning.
3. Install a new bulb in the reverse order of removal.

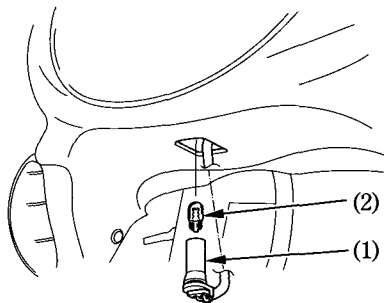

- (1) Position light socket  
(2) Bulb