

# MAINTENANCE

page

<b>83</b>	<b>MAINTENANCE</b>
83	THE IMPORTANCE OF MAINTENANCE
84	MAINTENANCE SAFETY
85	SAFETY PRECAUTIONS
86	MAINTENANCE SCHEDULE
89	TOOL KIT
90	SERIAL NUMBERS
91	COLOUR LABEL < Except BR type >
92	ENGINE OIL
98	SPARK PLUGS
104	THROTTLE OPERATION
105	COOLANT
106	DRIVE CHAIN
112	DRIVE CHAIN SLIDER
113	FRONT AND REAR SUSPENSION INSPECTION
114	SIDE STAND
115	WHEEL REMOVAL
121	BRAKE PAD WEAR
123	BATTERY
125	FUSE REPLACEMENT

page

128	BRAKELIGHT SWITCH ADJUSTMENT
129	BULB REPLACEMENT
<b>135</b>	<b>CLEANING</b>
<b>140</b>	<b>STORAGE GUIDE</b>
140	STORAGE
142	REMOVAL FROM STORAGE
<b>143</b>	<b>SPECIFICATIONS</b>
<b>148</b>	<b>CATALYTIC CONVERTER</b>