

## INSTRUMENTS AND INDICATORS

The indicators are contained in the instrument panel. Their functions are described in the tables on the following pages.

- (1) Fuel gauge
- (2) Left turn signal indicator
- (3) Immobilizer system (HISS) indicator  
〈 Except MX, IIMX type 〉
- (4) Tachometer
- (5) Tachometer red zone
- (6) Right turn signal indicator
- (7) Multi-function display
- (8) HESD indicator
- (9) PGM-FI malfunction indicator lamp  
(MIL)
- (10) High coolant temperature indicator
- (11) Low oil pressure indicator
- (12) Neutral indicator
- (13) High beam indicator
- (14) RESET button
- (15) SEL button

