

(Ref.No.) Description	Function
(12) Neutral indicator (green)	Lights when the transmission is in neutral. Should also light for a few seconds and then go off when the ignition switch is turned ON.
(13) High beam indicator (blue)	Lights when the headlight is on high beam. Should also light for a few seconds and then go off when the ignition switch is turned ON.
(14) RESET button	<p>This button is used to reset the tripmeter (page 25) or to adjust the time (page 27).</p> <p>E, III E type:</p> <p>This button is used to reset the tripmeter or to adjust the time or to change the speed and mileage units for the speedometer/odometer/tripmeter (page 26).</p>
(15) SEL button	This button is used to select the odometer, tripmeter A and tripmeter B (page 25) or to adjust the time (page 27).