

〈**Except MX, IIMX, BR type**〉

Use unleaded petrol with a research octane number of 95 or higher.

The use of leaded petrol will cause premature damage to the catalytic converter.

〈**MX, IIMX, BR type**〉

Use unleaded petrol with a pump octane number of 91 or higher.

The use of leaded petrol will cause premature damage to the catalytic converter.

NOTICE

If “spark knock” or “pinging” occurs at a steady engine speed under normal load, change brands of petrol. If spark knock or pinging persists, consult your Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda’s Limited Warranty.