


1. Remove the middle cowls (page 69 ).
2. Disconnect the radiator fan connector (1).
3. Release the wire harness clip (2) from the radiator heat guard (3).
4. Remove the radiator lower mount nut (4) and radiator lower mount bolt (5).
5. Remove the radiator upper mount bolt (6).

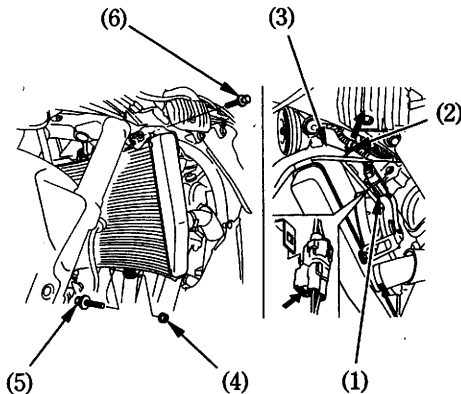

- (1) Radiator fan connector
- (2) Wire harness clip
- (3) Radiator heat guard
- (4) Radiator lower mount nut
- (5) Radiator lower mount bolt
- (6) Radiator upper mount bolt