

LOWER COWL

The lower cowl must be removed to adjust the clutch lever freeplay, to access the reserve tank, to replace the engine oil and oil filter, or to check the drive chain slider.

Removal:

1. Remove the bolts A (1), bolts B (2), bolts C (3), bolts D (4) and collar (5).
2. Remove the lower cowl (6), then pull out the tubes (7).


(CBR600RR)

Remove the lower cowl and clamp (8), then pull out the tubes.

(CBR600RR ABS)

Installation:

- Installation can be done in the reverse order of removal.
- Through the tubes properly in position.

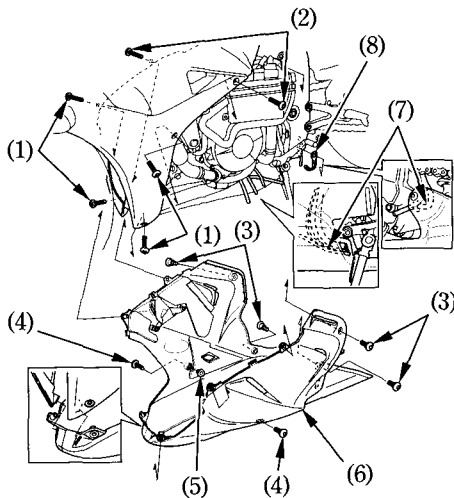

- (1) Bolts A
- (2) Bolts B
- (3) Bolts C
- (4) Bolts D
- (5) Collar

- (6) Lower cowl
- (7) Tubes
- (8) Clamp
(CBR600RR ABS only)