


### **Position Light Bulb (Except U type)**

1. Pull the position light socket (1) and remove it.
2. Pull out the bulb (2) without turning.
3. Install a new bulb in the reverse order of removal.

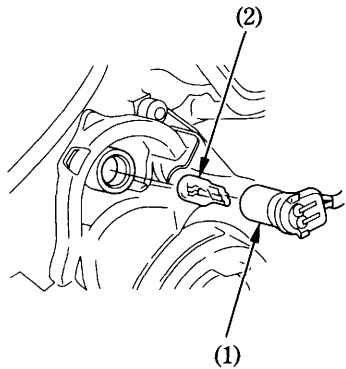

(1) Position light socket

(2) Bulb