



The immobilizer system has such a function that keeps the immobilizer system (HISS) indicator (1) blinking at 3 second intervals for 24 hours. This blinking function can be turned on or off.

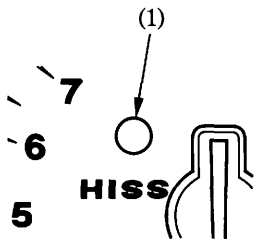

(1) Immobilizer system (HISS) indicator

To alter the blinking function,

1. Turn the ignition switch ON.
2. While pressing the right control button, simultaneously press the left control button. The clock will be set in the adjust mode with the minute display flashing.
3. Turn the ignition switch OFF within 10 seconds.

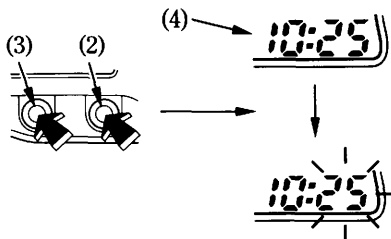

- (2) Right control button
- (3) Left control button
- (4) Digital clock