
- Front/Rear Turn Signal Bulb

 1. Remove the turn signal lens (1) from the turn signal by removing the screw (2).

 2. Slightly press in on the bulb (3) and turn in 90° counterclockwise. Remove the bulb.
- 3. Install a new bulb in the reverse order of removal.

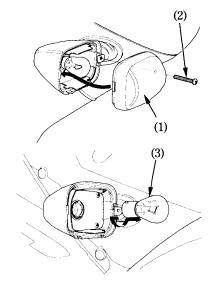

- (1) Lens
- (2) Screw

(3) Bulb