

## SPARK PLUGS

(Refer to the maintenance precautions on page 69 ).

Recommended plugs:


Standard:

CR9EH-9 (NGK) or  
U27FER 9 (DENSO)

For cold climate: (Below 5 °C, 41 °F)

CR8EH-9 (NGK) or  
U24FER 9 (DENSO)

1. Remove the right and left middle fairing (page 48 ) to remove the spark plugs.
2. Disconnect the spark plug caps from the spark plugs.
3. Clean any dirt from around the spark plug base. Remove the spark plug using the spark wrench (1) furnished in the tool kit.

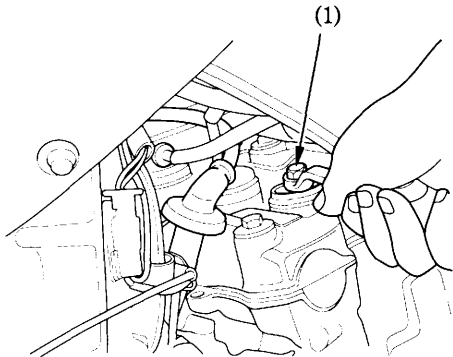

(1) Spark plug wrench