


ROTARY BEAM

The height of the rotary beam (1) can be adjusted by loosening the lock grip (2). When the rotary beam is extended with the ignition switch in the "P1" position, it is lighted and turned. When the rotary beam is fully retracted, the beam is turned off. An alarm buzzer sounds when the rotary beam remains extended or the lock grip is loosened with the ignition switch "ON" or while riding.

WARNING Never ride with the rotary beam extended or the lock grip loosened.

NOTE: Tighten the lock grip securely after the rotary beam has been adjusted.

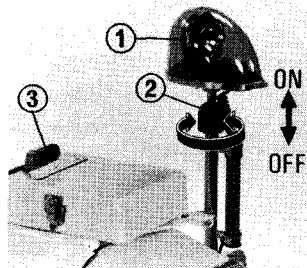

BRIEF BOX LAMP

The brief box lamp (3) is located on top of the brief box. This lamp comes on when the switch (4) inside the brief box is set to the "ON" position with the ignition switch in the "P1", "ON", or "P2" position.

