
## HELMET HOLDER

The helmet holder (1) is on the left side below the seat. Unlock the holder with the ignition key (2). Hang your helmet on the holder pin (3) and push it in to lock. Remove the key.

## **A**WARNING

\* The helmet holder is designed for helmet security while parked. Do not ride with a helmet attached to the holder; the helmet may interfere with safe operation and result in loss of control.

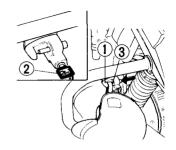

- (1) Helmet holder
- (2) Ignition key
- (3) Holder pin