

FINAL DRIVE OIL

(Refer to the maintenance precautions on page 56).

Change the oil as specified in the maintenance schedule.

NOTE:

* Change the oil with the final drive at normal operating temperature and the motorcycle upright on level ground to assure complete and rapid draining.

1. Remove the oil filler cap (1).
2. Place a drain pan under the final drive gear case and then remove the drain plug (2)
3. After the oil has completely drained, check that the sealing washer (3) on the drain plug is in good condition and install the drain plug.

4. With the motorcycle upright on level ground, fill the final drive with the recommended grade oil; approximately:

130 cm³ (4.4 US oz, 4.6 Imp oz)


after draining

150 cm³ (5.1 US oz, 5.3 Imp oz)

after disassembly

Make sure that the oil reaches a level between the two bosses (4) on the inner housing (visible below the lower edge of the inspection hole).

5. Install the oil filler cap.

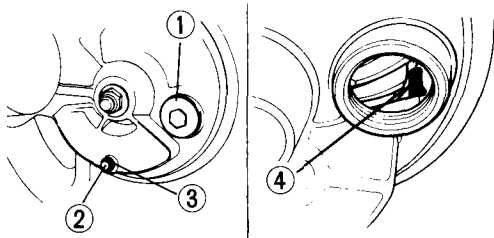

- (1) Oil filler cap
(2) Oil drain plug

- (3) Sealing washer
(4) Bosses