

WHEEL REMOVAL

(Refer to maintenance precautions on page 56).


Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Disconnect the speedometer cable from the speedometer gearbox by removing the cable set screw.
3. Remove the right caliper assembly (1) from the fork leg by removing the fixing bolts (2).

CAUTION:

* **To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.**

4. Remove the front axle holding bolt (3). Unscrew and pull out the front axle (4). Remove the front wheel.

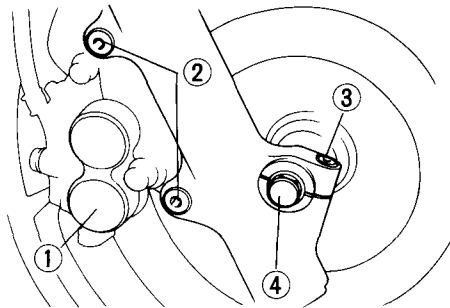

- | | |
|----------------------------|-----------------------|
| (1) Brake caliper assembly | (3) Axle holding bolt |
| (2) Fixing bolts | (4) Front axle |