


Rear Wheel Removal

(Refer to the maintenance precautions on page 56).

1. Place the motorcycle on its center stand.
2. Remove the rear mud guard (1) by removing screws (2).

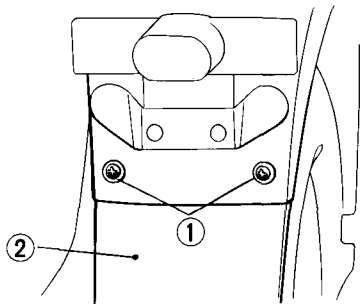

(1) Rear mud guard (2) Screws