

## **BRAKE PAD WEAR**

(Refer to the maintenance precautions on page 56).  
Brake pad wear depends upon the severity of usage, the type of riding, and road conditions. (Generally, the pads will wear faster on wet and dirty roads.)

Inspect the pads at each regular maintenance interval (page 53).


### **Front Brake**

Inspect the pads visually from the direction indicated by the arrow (1) during all regular service intervals to determine the pad wear. If either pad wears to the wear indicator (2), both pads must be replaced as a set.

#### **NOTE:**

\* Use only genuine Honda replacement friction pads offered by Honda dealers. When brake service is necessary consult your Honda dealer.

### **<FRONT BRAKE>**

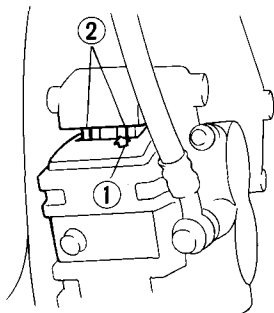

(1) Arrow      (2) Wear indicator