

Controls & Features


Start Button

The start button (1) is used for starting the engine. Pushing the button in starts the engine. See *Starting Procedure*, page 46.

The starter motor will not operate if the engine stop switch is in the OFF position when the start button is pushed.

The electric starter will only work when the brake lever is pulled in.

Engine Stop Switch

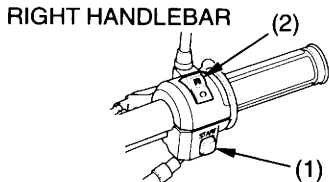

(1) start button

(2) engine stop switch

⊗ OFF

○ RUN

The engine stop switch (2) is used to stop the engine in an emergency. To operate, push the switch to the OFF position. The switch must be in the RUN position to start the engine, and it should normally remain in the RUN position even when the engine is OFF.