

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 175).

To protect the catalytic converter in your scooter's exhaust system, avoid extended idling and the use of leaded gasoline.

For information about carburetor adjustment for riding at high altitude, see page 176.

| | |
|--------------------------------------|----|
| Safe Riding Precautions | 44 |
| Starting & Stopping the Engine | 45 |
| Preparation..... | 45 |
| Starting Procedure | 46 |
| How to Stop the Engine | 50 |
| Riding..... | 51 |
| Braking | 58 |
| Parking..... | 60 |
| Riding with Cargo | 64 |