

Service Your Honda

Service Preparations

Maintenance Component Locations	81
Owner's Manual Storage.....	84
Maintenance Lid Removal.....	85
Plug Maintenance Lid Removal.....	86

Service Procedures

Fluids & Filters

Fuel	87
Engine Oil & Strainer Screen.....	90
Coolant.....	100
Air Cleaner	104
Crankcase Breather	106

Engine

Throttle	107
Engine Idle Speed.....	109
Spark Plug.....	111

Chassis

Brakes	114
Tires	118

Electrical

Battery.....	125
--------------	-----

Appearance Care	130
-----------------------	-----