


Plug Maintenance Lid Removal

Refer to *Safety Precautions* on page 70 .


The plug maintenance lid must be removed to service the spark plug and engine idle speed.

STEPBOARD

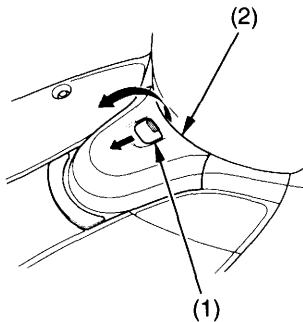

(1) tab

(2) fuel tank lid

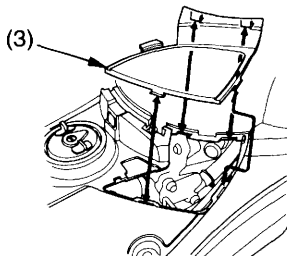

(3) plug maintenance lid

Removal

1. Pull the tab (1) and open the fuel tank lid (2).
2. Remove the plug maintenance lid (3).

Installation

- Installation can be done in the reverse order of removal.