

### Removal from Storage

Refer to *Safety Precautions* on page 70 .

1. Uncover and clean your scooter.
2. If your scooter has been stored for more than four months — change the engine oil (page 95 ).
3. If your scooter has been stored for more than two months — ask your Honda dealer to drain and replace the fuel.
4. Charge the battery (page 129 ) as required. Install the battery.
5. Perform a pre-ride inspection (page 34 ), then test-ride your scooter at low speeds.