


Engine Oil

Changing Engine Oil

RIGHT SIDE

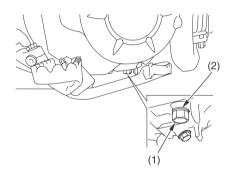

(1) oil drain bolt(2) sealing washer

- 1. If the engine is cold, start it and let it idle for 3-5 minutes. Turn the engine off. Wait 2-3 minutes for the oil to settle.
- 2. Park your motorcycle on a firm, level surface.
- 3. Remove the oil fill cap/dipstick.
- 4. Place a drain pan under the crankcase.
- 5. Unscrew and remove the oil drain bolt (1).
- 6. After most of the oil is drained, gently tilt the motorcycle from side to side to drain the remaining oil.
- 7. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 129).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

(cont'd)

Servicing Your Honda 67

