

## SEAT


The seat (1) must be removed for battery and main fuse maintenance.

### Removal:

1. Remove the nuts (2) under the rear fender.
2. Remove the seat up and back.

### Installation:

1. Set the seat prong (3) into the hook on the frame while aligning the slot (4) on the seat with the stud (5) on the fuel tank.
2. Insert the seat bolts (6) into the frame.
3. Install the nuts and tighten them.

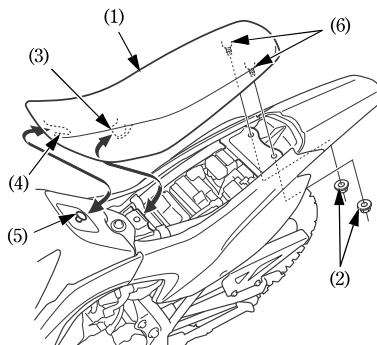

- |           |                |
|-----------|----------------|
| (1) Seat  | (4) Slot       |
| (2) Nuts  | (5) Stud       |
| (3) Prong | (6) Seat bolts |