


## WHEEL REMOVAL

Refer to the Safety Precautions on page 47.

### Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Loosen the axle holder nuts (1) and remove the front axle holder (2).
3. Unscrew the axle (3). Remove the wheel.

Do not depress the brake lever when the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs servicing of the brake system will be necessary. See your Honda dealer for this service.

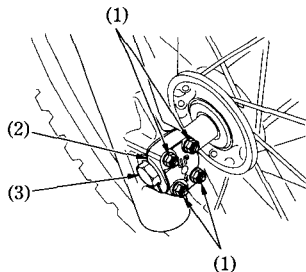

- (1) Axle holder nuts
- (2) Axle holder
- (3) Front axle