

RIGHT SIDE COVER


The right side cover must be removed for seat removal.

Removal:

1. Remove the bolts (1).
2. Pull out the right side cover (2).

Installation:

1. Position the right side cover so the prong (3) is aligned with the frame grommet (4).
2. Push the right side cover in place.
3. Install the securing bolts and tighten them.

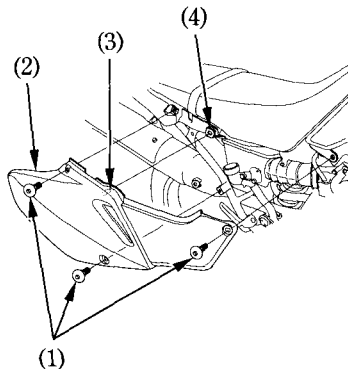

- | | |
|----------------------|-------------|
| (1) Bolts | (3) Prong |
| (2) Right side cover | (4) Grommet |