

SEAT


The seat must be removed for air cleaner maintenance and to access the owner's manual.

Removal:

1. Remove the right and left side covers (page 35, 36).
2. Remove the seat mounting bolts (1).
3. Remove the seat (2) by pulling up and backward.

Installation:

1. Insert the front recess (3) into the front prong (4) and the rear prong (5) into the rear recess (6).
2. Tighten the seat mounting bolts securely.
3. Install the both side covers.

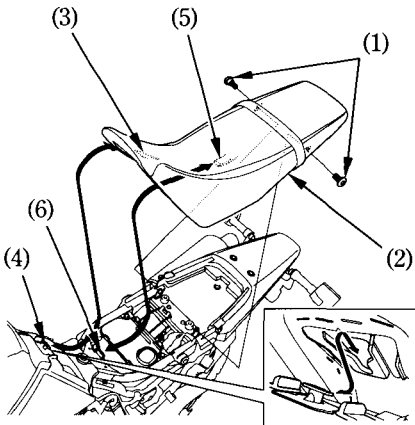

- | | |
|-------------------------|-----------------|
| (1) Seat mounting bolts | (4) Front prong |
| (2) Seat | (5) Rear prong |
| (3) Front recess | (6) Rear recess |