

Preparation

Before starting, insert the key, turn the ignition switch ON and confirm the following:

- The transmission is in neutral (neutral indicator is ON).
- The engine stop switch is at \odot (RUN).
- The fuel valve is ON.


Starting Procedure

To restart a warm engine, follow the procedure for "High Air Temperature."

Normal Air Temperature

$10^{\circ} - 35^{\circ}\text{C}$ ($50^{\circ} - 95^{\circ}\text{F}$)

1. Pull the choke lever (1) back all the way to Fully ON (A), if the engine is cold.
2. With the throttle closed, press the start button.

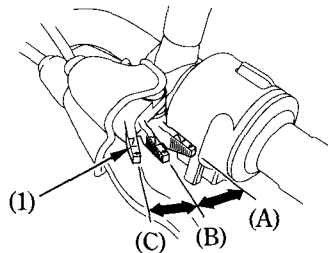

(1) Choke lever

(A) Fully ON

(B) Halfway position

(C) Fully OFF