


Subframe Removal

Refer to *Safety Precautions* on page 19.

Removal


1. Remove the muffler (page 87).
2. Remove the exhaust joint pipe (page 89).
3. Remove the seat (page 29).

4. Disconnect the crankcase breather tube (1).
5. Unhook the fuel tank band (2).
6. Loosen the screw (3) on the air cleaner connecting tube clamp (4).

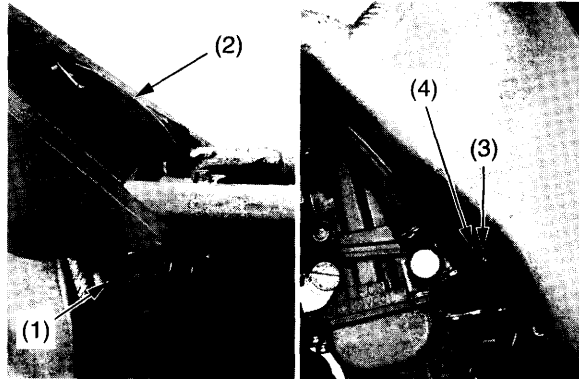

- (1) crankcase breather tube
- (2) fuel tank band
- (3) screw
- (4) air cleaner connecting tube clamp

7. Remove the subframe lower mounting bolts (5) and subframe upper mounting bolt (6). Then remove the subframe (7) by pulling it straight backward.

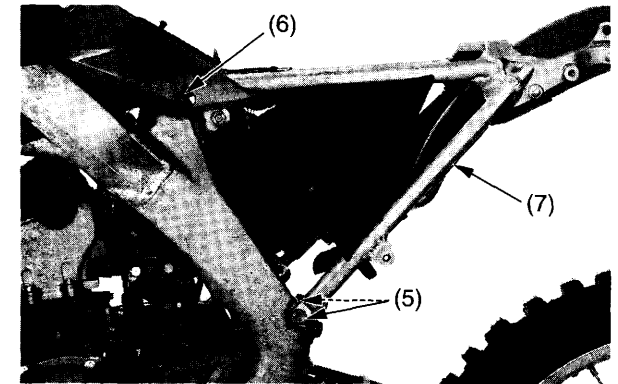

- (5) subframe lower mounting bolts
- (6) subframe upper mounting bolt
- (7) subframe