
- 12. Lubricate the dust seals (12), rear brake pedal (13) pivot and rear brake pedal pivot bolt (14) with Honda Lithium Grease or equivalent.
- 13. Apply locking agent to the brake pedal pivot bolt threads.
- 14.Install the dust seals into the rear brake pedal.
- 15.Install the pivot bolt with the washer (15) and tighten the pivot bolt to the specified torque:
 36 N·m (3.7 kgf·m, 27 lbf·ft)
 Connect the brake pedal return spring (16) if it was removed.

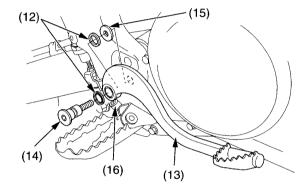

- (12) dust seals
- (15) washer
- (13) rear brake pedal (16) brake pedal return spring
- (14) brake pedal pivot bolt
- 16. Fill the crankcase with transmission oil (page 40).