



Exhaust Joint Pipe Removal

1. Remove the muffler (page 87).
2. Remove the mud guard (1) by removing the screws (2).

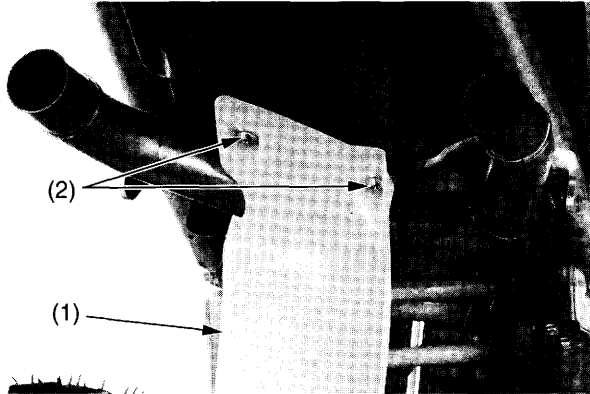

(1) mud guard (2) screws


3. Loosen the joint pipe clamp bolt (3).
4. Remove the exhaust joint pipe mounting bolt (4) and exhaust joint pipe (5).

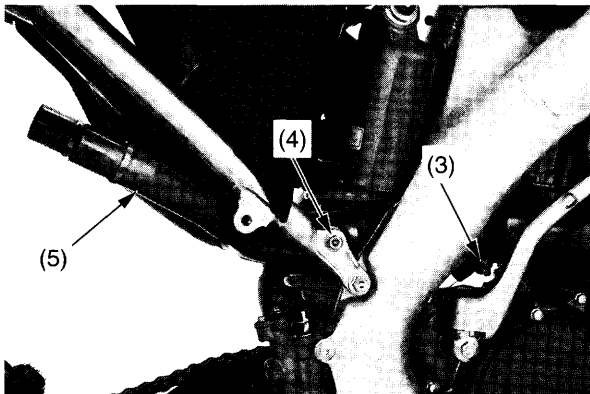

(3) joint pipe clamp bolt
(4) exhaust joint pipe mounting bolt
(5) exhaust joint pipe


Exhaust Joint Pipe Installation

1. Remove the old gasket.
2. Install the joint pipe clamp (1) by aligning the tab (2) of the joint clamp with the cut-out (3) of the exhaust joint pipe (4).

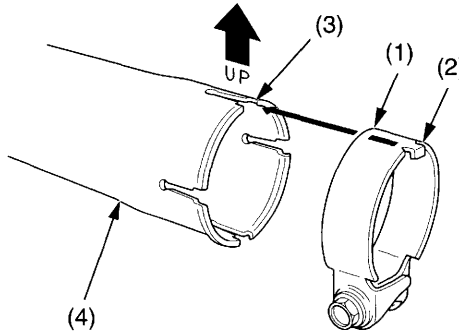

(1) joint pipe clamp (3) cut-out
(2) tab (4) exhaust joint pipe

3. Install a new gasket (5) to the exhaust pipe (6).
4. Install the exhaust joint pipe (4) to the exhaust pipe, and temporarily install the joint pipe clamp bolt and exhaust joint pipe mounting bolt.

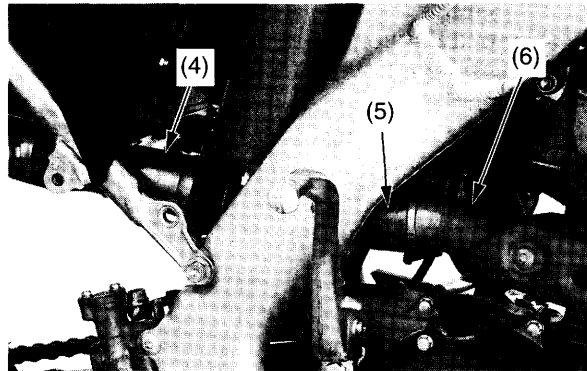

(4) exhaust joint pipe
(5) gasket
(6) exhaust pipe

5. Install the exhaust joint pipe mounting bolt.
6. Install the muffler (page 88), but do not tighten the bolt yet.
7. Tighten the joint pipe clamp bolt to the specified torque:
21 N·m (2.1 kgf·m, 15 lbf·ft)
8. Tighten the exhaust joint pipe mounting bolt to the specified torque:
26 N·m (2.7 kgf·m, 19 lbf·ft)
9. Tighten the muffler clamp bolts and muffler mounting bolts (page 88).
10. Installation can be done in the reverse order of removal.