


Fluid Level Inspection

Front Brake Fluid Level Check

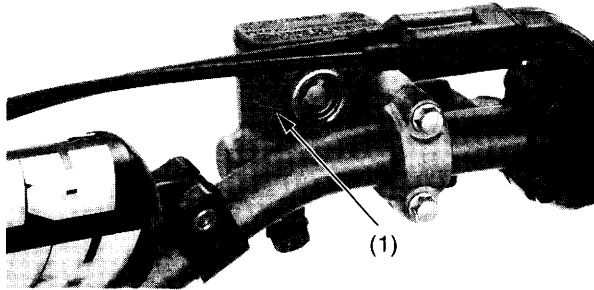

(1) LWR mark


With the motorcycle in an upright position, check the fluid level.

It should be above the LWR mark (1). If the level is at or below the LWR mark, check the brake pads for wear (page 81).

Worn brake pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.

If the front brake lever freeplay exceeds 20 mm (0.8 in), there is probably air in the brake system and it must be bled. Refer to the Honda Shop Manual or see your Honda motorcycle dealer for brake bleeding.

Rear Brake Fluid Level Check

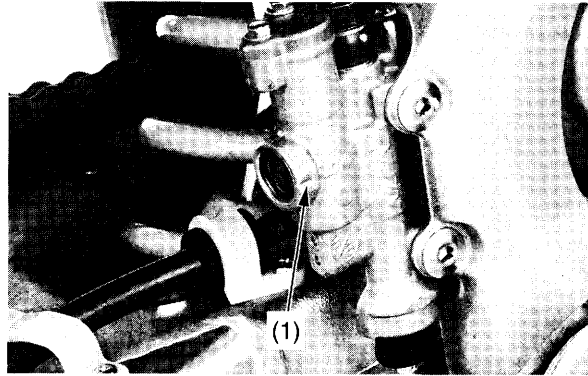

(1) LOWER mark

With the motorcycle in an upright position, check the fluid level.

It should be above the LOWER mark (1). If the level is at or below the LOWER mark, check the brake pads for wear (page 81).

Worn brake pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.

If the rear brake pedal freeplay exceeds 20 mm (0.8 in), there is probably air in the brake system and it must be bled. Refer to the Honda Shop Manual or see your Honda motorcycle dealer for brake bleeding.