


Front Suspension Adjustments

14. Hold the outer tube, then remove the fork damper (6) from the outer tube using a lock nut wrench (7). Gently slide the outer tube down onto the lower end (axle holder) (23).

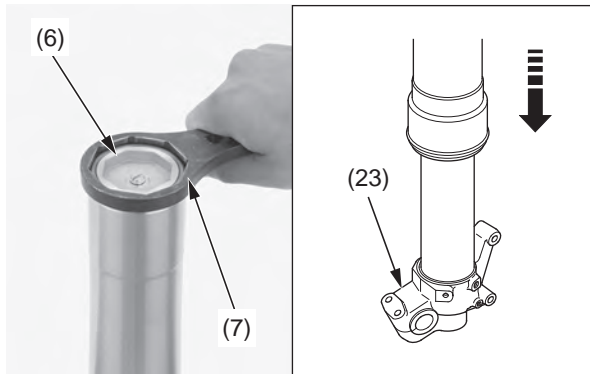


(6) fork damper
(7) lock nut wrench

(23) axle holder

NOTICE


The outer tube (24) can drop on the slider (25) and damage the fork dust seal (21). To avoid damage, hold both the outer tube and slider when removing the fork damper.

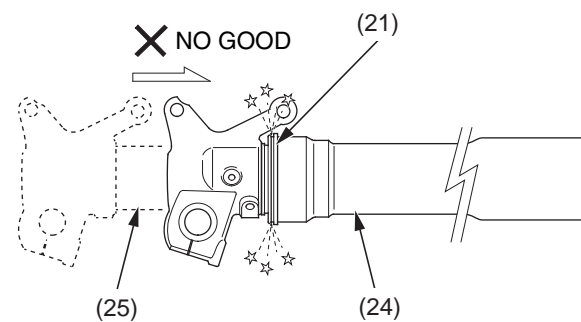

(21) fork dust seal
(24) outer tube

(25) slider

15. Drain the fork oil from the outer tube/slider (26) and oil holes (27) of the fork damper.

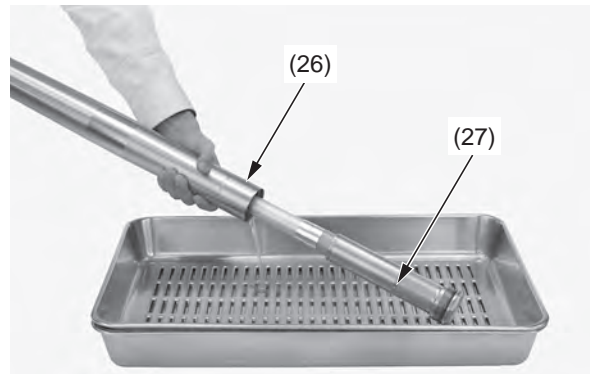

(26) outer tube/slider


(27) oil holes

16. Place the lower end (axle holder) (23) of the slider in a vise with a piece of wood or soft jaws to avoid damage.

NOTICE

Over-tightening the vice can damage the axle holder.


17. Remove the fork centre bolt (28).

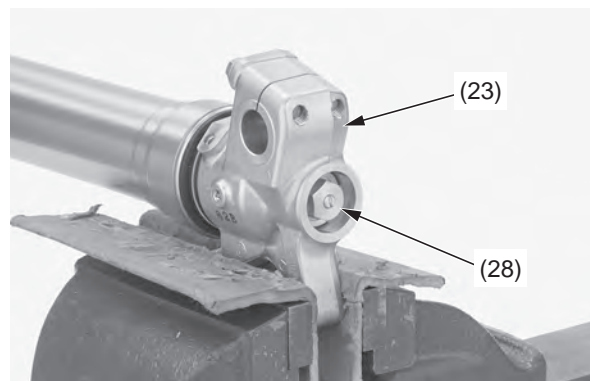

(23) axle holder

(28) fork centre bolt

18. Make the mechanic's stopper tool out of a thin piece of steel (2.0 mm (0.08 in) thick) as shown if you do not have a special tool.

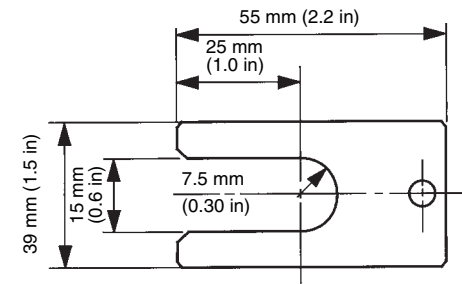

19. Push the fork centre bolt (28) out from the axle holder (23) of the slider by pushing the fork damper. While the fork centre bolt is pushed out, install the piston base (29) or a mechanic's stopper tool between the axle holder and fork centre bolt lock nut (30).

• Piston base 07958-2500001

20. Hold the fork centre bolt lock nut and remove the fork centre bolt from the fork damper.

NOTICE

Do not remove the lock nut from the fork damper piston rod. If the lock nut is removed, the piston rod will fall in the fork damper and you may not reassemble the fork damper.