


3. Soak the air cleaner in gear oil (SAE 80–90) until saturated, then squeeze out the excess oil.
4. Reinstall the air cleaner.
5. Reinstall the air cleaner housing cover (2), aligning its projection (4) with the projection (5) on the air cleaner housing (6).

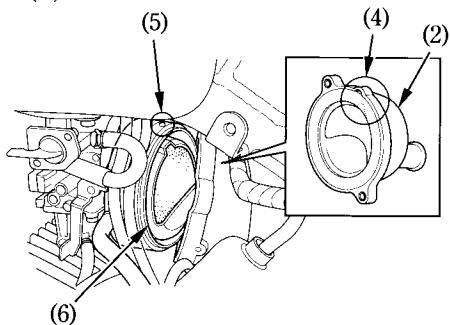

- (2) Air cleaner housing cover
- (4) Projection
- (5) Projection
- (6) Air cleaner housing