

Maintenance Schedule

Items	Frequency	Whichever Comes First ⇒	Initial Maint.	Regular Maint. Interval				Refer to page:		
				mi	100	600	1,200		1,800	2,400
				km	150	1,000	2,000		3,000	4,000
				Note	Month	1	6		12	18
Drive Chain		Note 1	I, L	I, L: every 300 mi (500 km) or 3 month				97		
Drive Chain Slider				I	I	I	I	98		
Brake Shoe Wear				I	I	I	I	85		
Brake System			I	I	I	I	I	82		
Clutch System			I	I	I	I	I	69		
Side Stand					I		I	96		
* Suspension					I		I	79		
* Spark Arrester				C: every 1,000 mi (1,600 km) or every 100 operating hours				77		
* Nuts, Bolts, Fasteners			I		I		I	—		
** Wheels/Tires			I	I	I	I	I	87, 92		
** Steering Head Bearings			I		I		I	—		

- * Should be serviced by your Honda dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 142).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.