

Maintenance Schedule

Items	Frequency	Whichever Comes First ⇒	Regular Maint. Interval					Refer to page:	
			Initial Maint.	600	1,200	1,800	2,400		
			mi	100	2,000	3,000	4,000		
		⇒	mi	100	600	1,200	1,800	2,400	
			km	150	1,000	2,000	3,000	4,000	
		Note	Month	1	6	12	18	24	
NON-EMISSION RELATED ITEMS		Note 1		I, L	I, L: every 300 mi (500 km) or 3 months				98
					I	I	I	I	99
					I	I	I	I	85
				I	I	I	I	I	82
				I	I	I	I	I	70
						I		I	97
	*					I		I	79
	*					C: every 1,000 mi (1,600 km) or every 100 operating hours			77
	*				I		I	I	—
	**				I	I	I	I	88, 93
**				I		I	I	—	

- * Should be serviced by your Honda dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 144).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.